



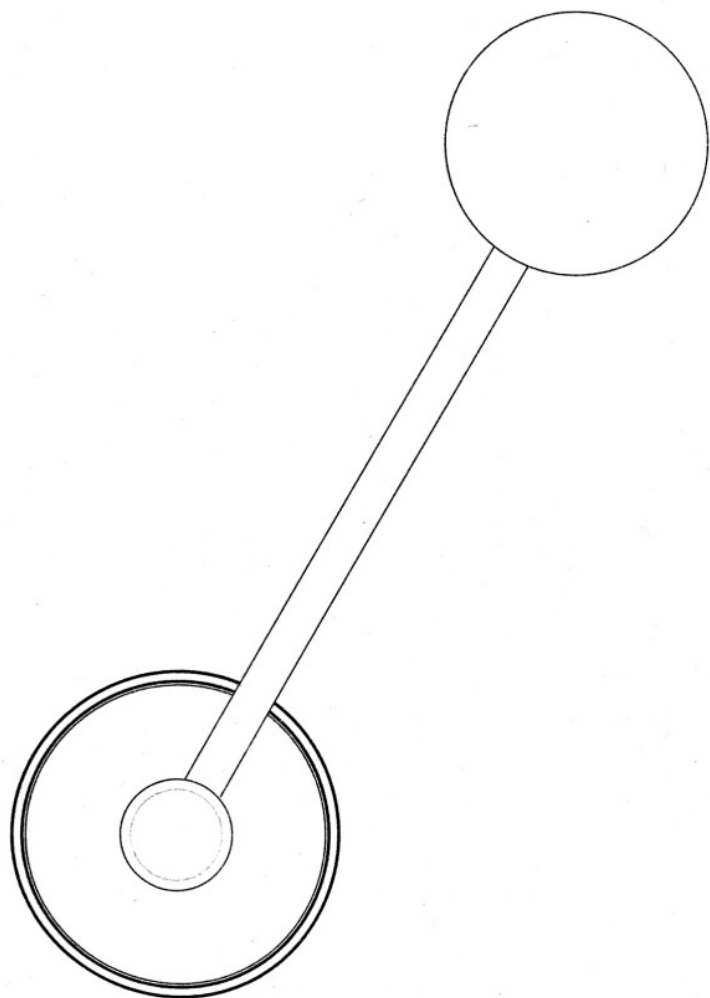


Q Manual Coffee Grinder

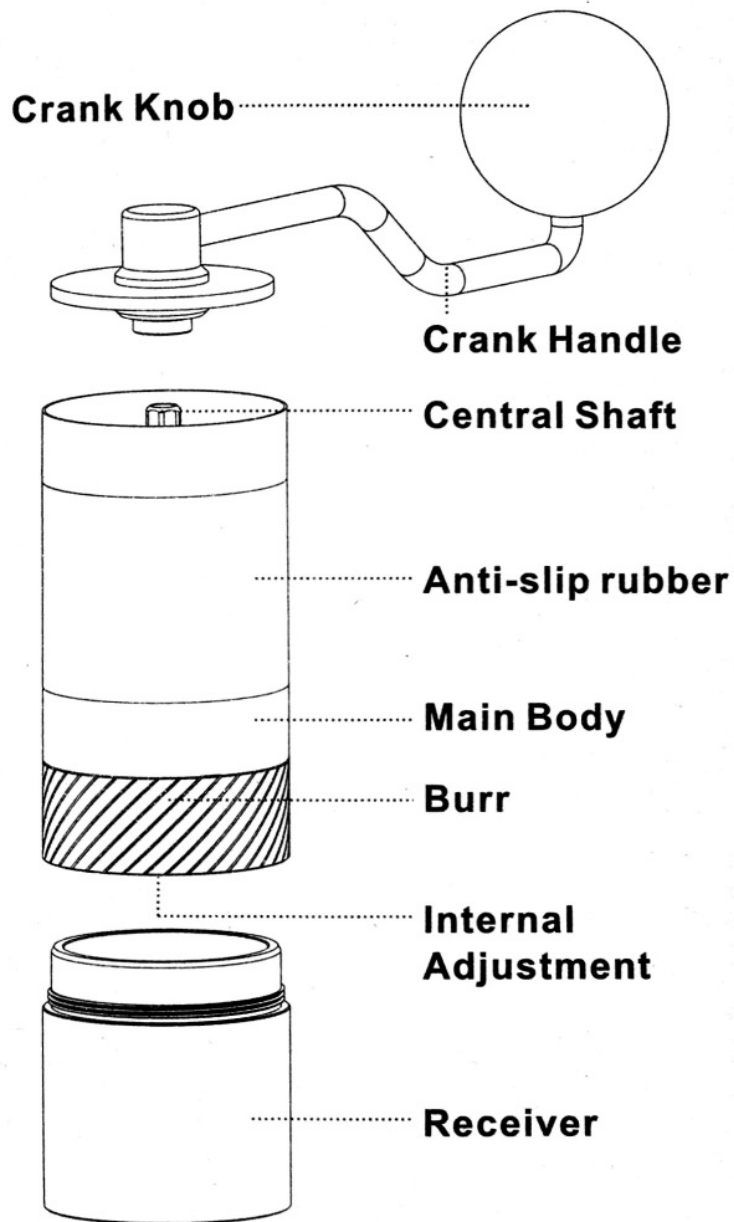


Expanded View



 Grounds Capacity: 15-20g
(depending on the bean type)



User Instructions

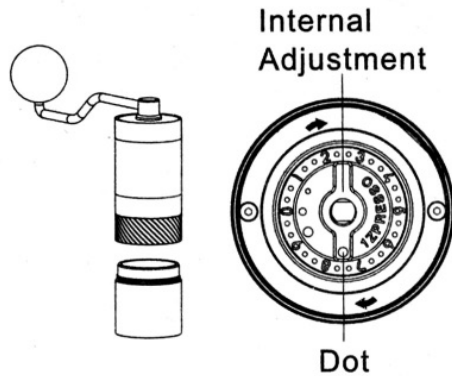


1) Adjusting the Grind Setting

Move the adjustment dial clockwise to make the grinds finer and shift the dial counterclockwise to make the grinds coarser

1. To begin, install the crank handle/lid and hold in place to prevent rotation.
2. Turn the adjustment dial clockwise until it is at its tightest position. The number marked by the dot is the starting point. Please note, the number may not be 0.
3. From the starting point, simply move the adjustment dial counterclockwise to your preferred grinding degree.
4. Each complete rotation adjusts the grinds by 0.75mm, and there are 10 numbers and 30 clicks in a rotation.
5. Please refer to the grind setting reference guide for a suggestion of the ideal setting for various brewing methods.

2) Grinding the Coffee

1. Load a maximum of 20g of coffee into the upper bean chamber and replace the lid/crank handle.
2. Rotate the crank handle clockwise until all the beans are ground.

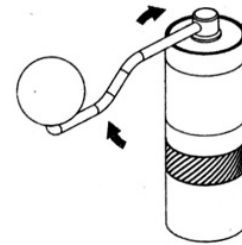


More information is available on our website:
<https://1zpresso.co> or scan the QR code on last page.

Precautions



- Ensure the grinder is never washed or cleaned with water.
- To ensure longevity, keep the grinder in a dry location.
- Please follow the instructions properly for disassembly and reassembly, paying attention to the order of parts and their correct position.
- This is not a toy. Keep the grinder out of reach of young children to ensure their safety.

Quick Cleaning Guide

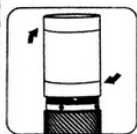

1. The body can be quickly unscrewed for a quick cleaning and instant access to most major parts. Simply grip the body below and above the diagonal intersection and twist in a clockwise direction.
2. After cleaning, ensuring no grounds are in the screw threads, twist the body counterclockwise to tighten to finger-tight.

Deep Cleaning Guide

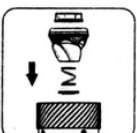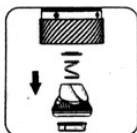

1. Deep cleaning involves dismantling the grinder to gain access to all the parts independently. To begin, install the crank handle unit and hold in place to prevent rotation. Twist the adjustment dial counterclockwise until it detaches.
2. The adjustment dial, inner burr, shaft spring and lower bearing cap, respectively, will now detach from the bottom. Take note of their order for reassembly.
3. Remove the crank handle unit to release the central shaft from the top of the shaft chamber.
4. Using a clean, dry brush and blower, clean each of the parts.


Reassembly

1. Push the central shaft through the top of the shaft chamber and place the crank handle into position.
2. Place the following parts into the bottom of the shaft chamber in their respective order: lower bearing cap (convex side facing upward), spring, conical burr, and adjustment dial. Screw the adjustment dial clockwise to place it into its position.
3. While locking the rotation of the crank handle with your other hand, twist the adjustment dial in a clockwise position until reaching the lowest grind setting.

Warning: DO NOT attempt to further disassemble or remove the following components:



The burr ring unit and outer burr

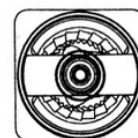

The bearings attached to the upper shaft chamber

